


AKM 883

DE FR NL GB

PRODUCT DESCRIPTION SHEET

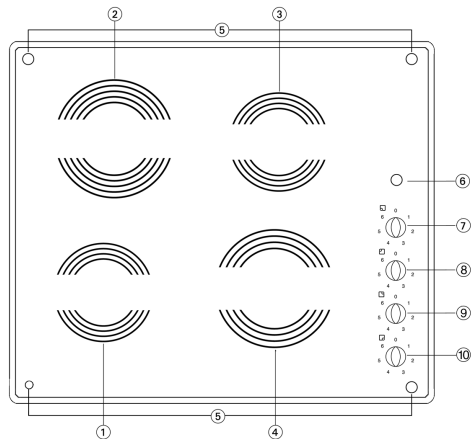


- To use the hob, turn the knob(s) clockwise and set it/them to the required power.
- To turn the hob off, turn the knob(s) back to position "0".
- The hob is fitted with residual heat indicators. These light up when the cooking zones reach temperatures that could cause burns. These indicators remains alight after the cooking zones are switched off, and turn off only when the zones are no longer hot enough to be dangerous.
- A special device allows the knobs to be raised by about 1 cm, for cleaning the cooking zones below. After cleaning, return the knob to the original position.


1. Radiating cooking zone Ø 145, 1200 W
2. Radiating cooking zone Ø 210, 2100 W
3. Radiating cooking zone Ø 145, 1200 W
4. Radiating cooking zone Ø 180, 1700 W
5. Residual heat indicator
6. Mains indicator light
7. Front left cooking zone control knob
8. Rear left cooking zone control knob
9. Rear right cooking zone control knob
10. Front right cooking zone control knob



Important:
To avoid permanently damaging the glass-ceramic top, do not use:
- Pots with bottoms that are not perfectly flat.
- Metal pots with enamelled bottom.

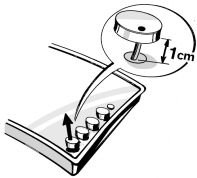

DIMENSIONS OF THE COOKTOP AND WORKTOP

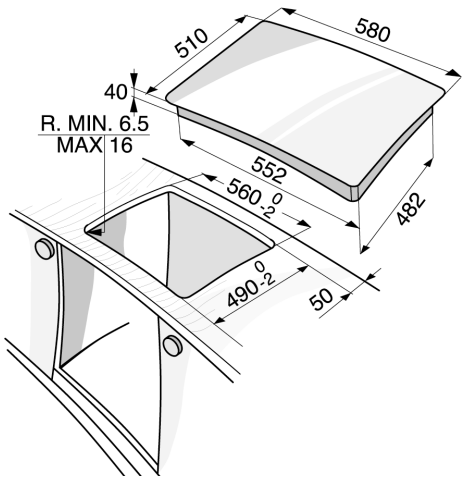

ELECTRICAL CONNECTION

Supply voltage	Conductors (number and size)
230 V ~	3 X 2.5 mm ²
230 V 3 ~ +	4 X 1.5 mm ²
400 V 3N ~ +	5 X 1.5 mm ²
400 V 2N ~ +	4 X 1.5 mm ²